



SCATTER-SHIELD™ INSTALLATION INSTRUCTIONS



UNIT WITHOUT SCATTER-SHIELD™

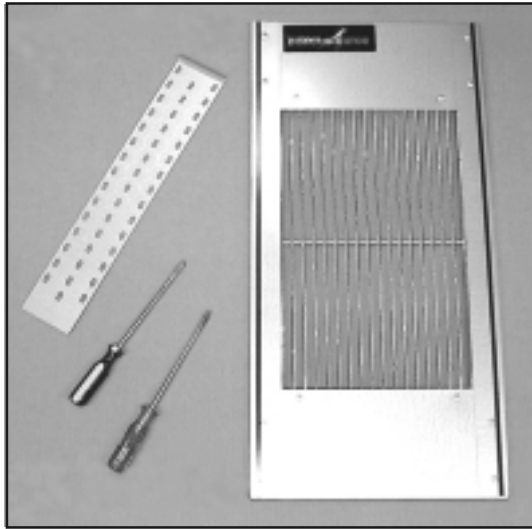


YOU WILL NEED SAFETY GUARD, SCREW-DRIVERS, AND SCATTER-SHIELD™.

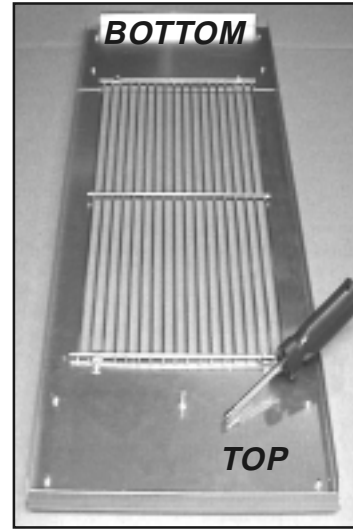


1

LAY GUARD FLAT (BACK SIDE UP). REMOVE SAFETY SWITCH PLUNGER/PROBE.

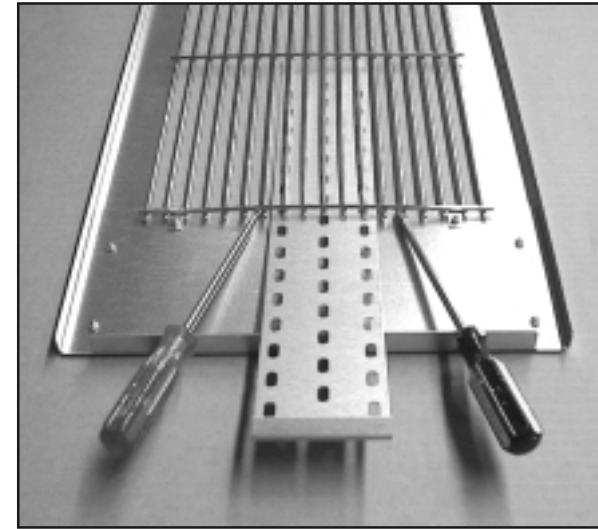

2


GENTLY EASE SCREWDRIVERS BETWEEN GUARD AND METAL FRAME; SLIDE SCATTER-SHIELD™ BETWEEN GUARD & METAL FRAME.

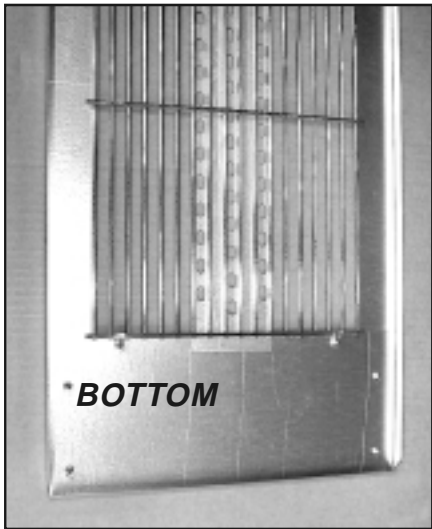

BOTTOM

3


SCATTER-SHIELD™ INSERTED BETWEEN GUARD AND METAL FRAME.

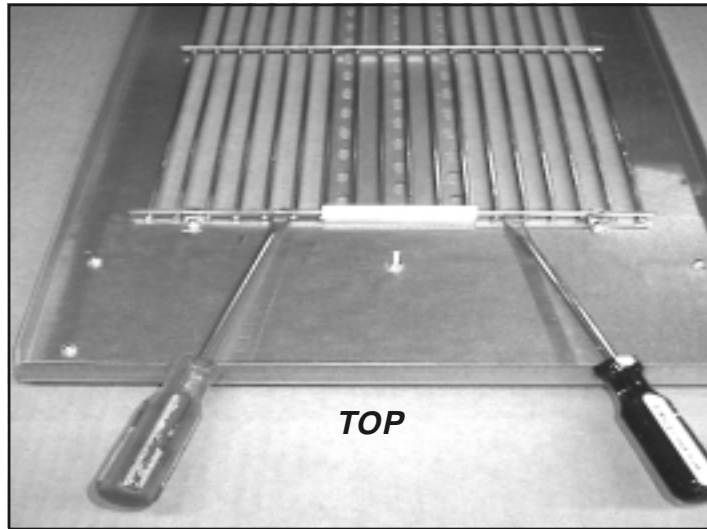

TOP


4

REPLACE SAFETY SWITCH PLUNGER/PROBE. NOTICE: SCATTER-SHIELD™ LIP SECURELY RESTS ATOP THE CHROME GUARD.

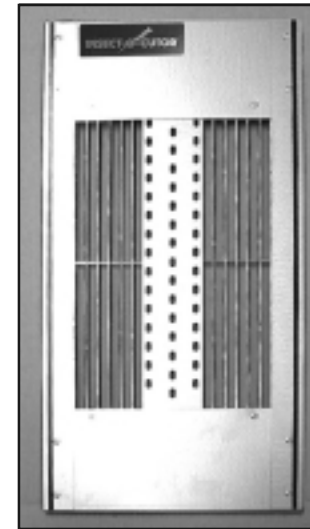

5

SAFETY GUARD WITH SCATTER-SHIELD™ IN PLACE.

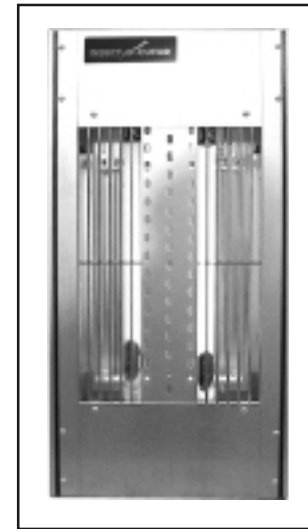

INSECT-O-CUTOR® UNIT WITH SCATTER-SHIELD™